




STANDARD KIT STARLINK


What's In The Box

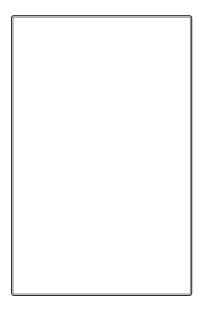

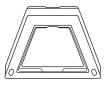

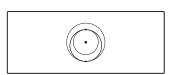

Standard

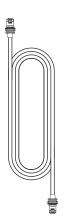


Starlink Cable 15 m (49.2 ft)

Kickstand



AC Power Cable 1.5 m (4.92 ft)



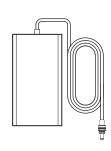


Power Supply

1.5 m
(4.92 ft)


Package Weight: 6.73 kg (14.83 lbs)

Package Dimensions: 652.4 x 451.7 x 97.9 mm (25.69 x 17.78 x 3.84 in)

STANDARD STARLINK

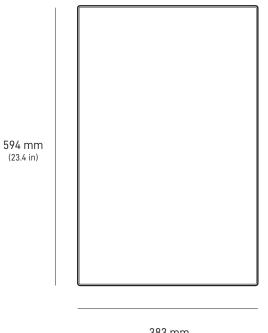



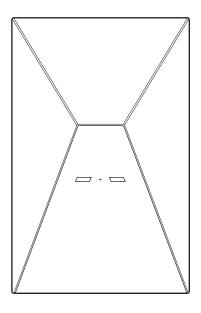

383 mm (15.07 in) 39.7 mm (1.5 in)

Antenna Electronic Phased Array

Field of View 110°

Orientation Software Assisted Manual Orienting

Weight 2.9 kg (6.4 lb)

3.2 kg (7 lb) with Kickstand

3.8 kg (8.3 lb) with Kickstand & 15 m Cable


Environmental Rating IP67 Type 4

Operating Temperature -30°C to 50°C (-22°F to 122°F)


Wind Speed Operational: 96 kph+ (60 mph+)


Snow Melt Capability Up to 40 mm / hour (1.5 in / hour)

Power Consumption Average: 75 - 100 W

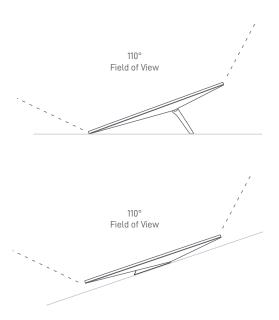


KICKSTAND

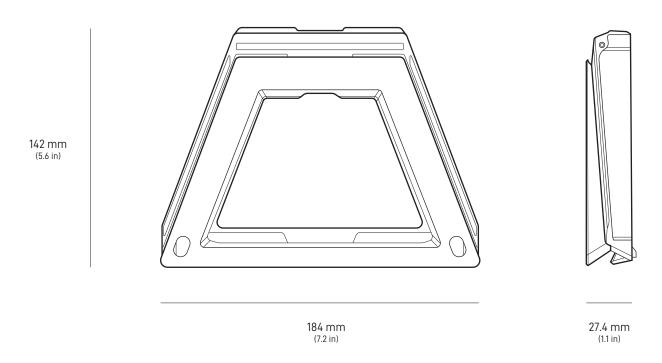

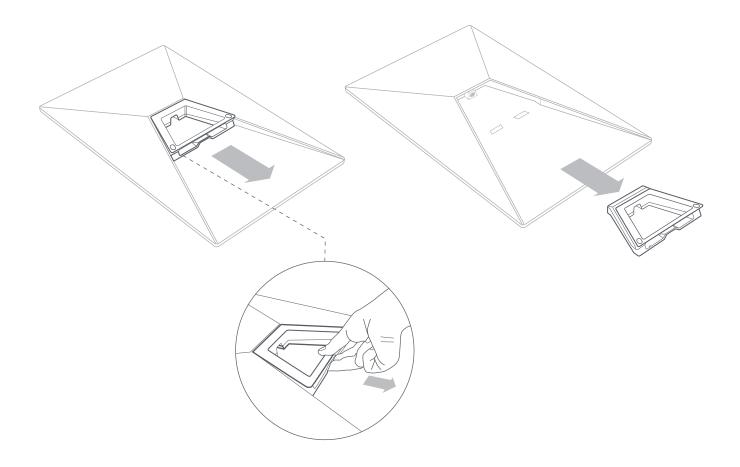


ROUTER STARLINK

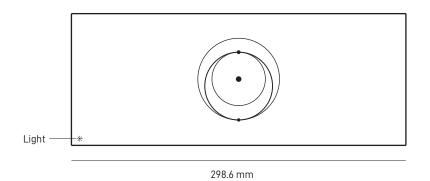



120.8 mm (4.75 in)

43.4 mm (1.70 in)

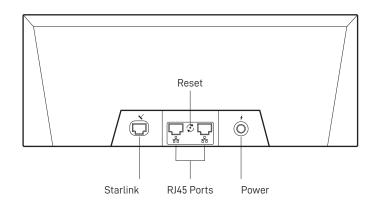

Product Dimensions 43.4 x 298.6 x 120.4 mm (1.7 in x 11.76 in x 4.74 in)

Wi-Fi Technology 802.11 a/b/g/n/ac/ax

Generation WiFi 6

Radio Tri Band 4 x 4 MU-MIMO

Ethernet Ports Two (2) Latching Ethernet LAN ports with removable cover

Coverage Up to 297 m² (3,200 ft²)

Operating Temperature -30°C to 50°C (-22°F to 122°F)

Weight 0.57 kg (1.25 lbs)

Security WPA2

Environmental Rating IP56 Rated (Water Resistant), configured for indoor use


Power Indicator LED | face plate, lower left corner of router

Mesh Compatibility Compatible with Starlink Gen 2 and Gen 3 Mesh Nodes, up to 3 Starlink Mesh Nodes

*Not compatible with 3rd party mesh systems

Devices Connect up to 235 devices

POWER SUPPLY STARLINK

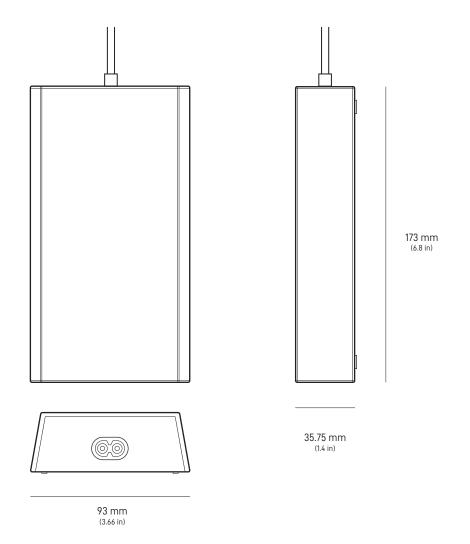


Product Dimensions 173 x 93 x 35.75 mm (6.8 in x 3.66 in x 1.4 in)

Weight 0.65 kg (1.43 lbs)


Environmental Rating IP66 Type 4


Operating Temperature -30°C to 60°C (-22 to 140°F)

Power Specifications $100-240 \text{V} \sim 2.5 \text{A} 50 - 60 \text{ Hz}$

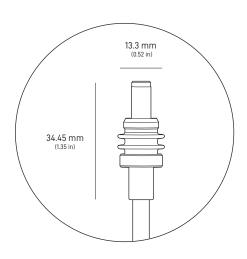


STARLINK CABLE STARLINK

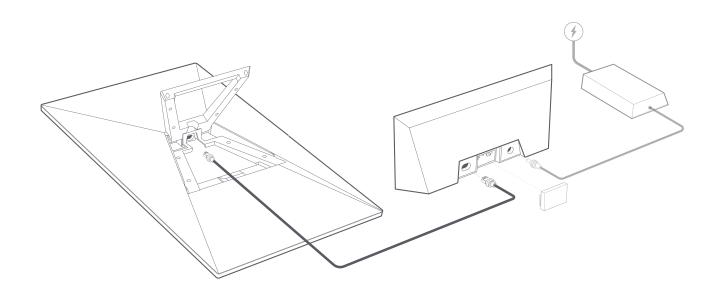

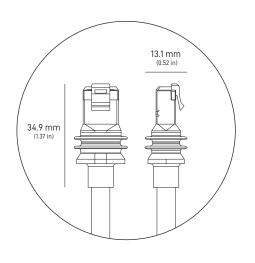



Pin 1
Shield
8
7
6
5
4
3
2
1


Wire Color	Pin 2
Drain - Bare Wire	Shield
Brown	8
White / Brown	7
Green	6
White / Blue	5
Blue	4
White / Green	3
Orange	2
White / Orange	1
	I

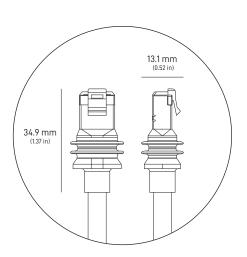

POWER SUPPLY CABLE STARLINK

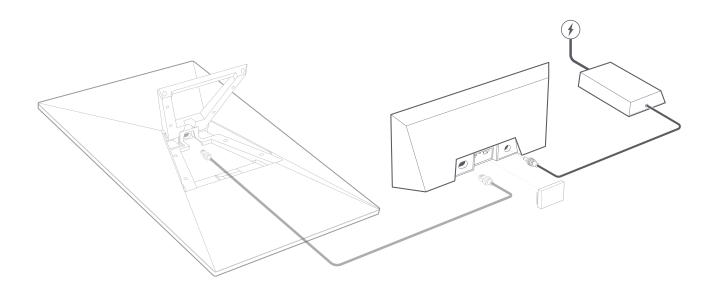

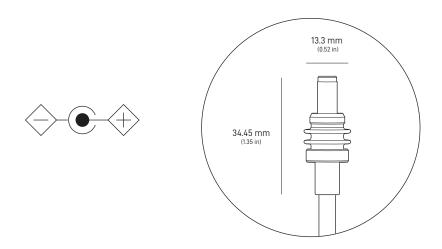

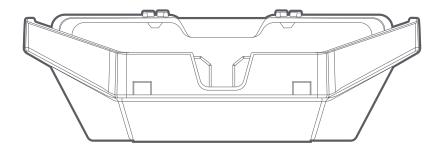



MOBILITY MOUNT KIT STARLINK


What's in the Box



Recommended Tools

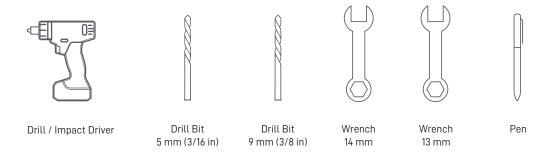

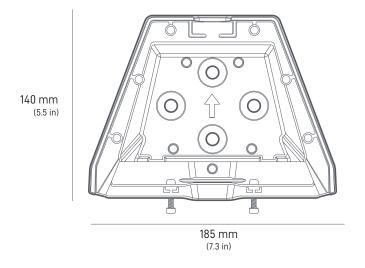

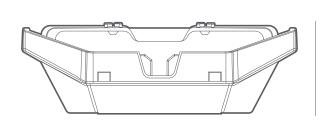

60 mm (2.4 in)

SCREW INSTALLATION

1 | Download the Starlink App

Scan the QR code to download the Starlink App.








2 | Find Mounting Location


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overheard. Objects that obstruct the connection between your Starlink and the satellite will cause service interruptions. Use the obstructions tool in your App to ensure you have selected a suitable mounting location.

You will also want to ensure your Starlink is mounted in the correct orientation relative to your vehicle as shown below.

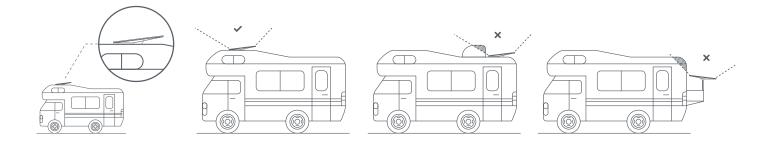

3 Remove Kickstand


Squeeze the release tab and pull it away from its fixed location.

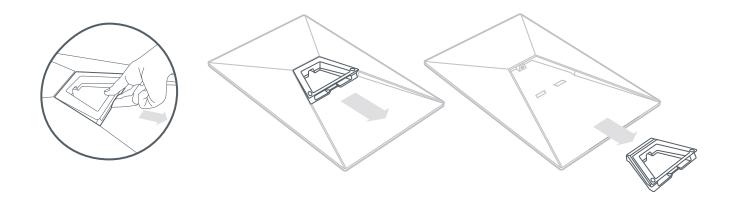

SCREW INSTALLATION

4 | Mark the Pilot Holes


Identify the installation location on your vehicle and mark the location of the 4 holes on your mobility mount using a pen or pencil.

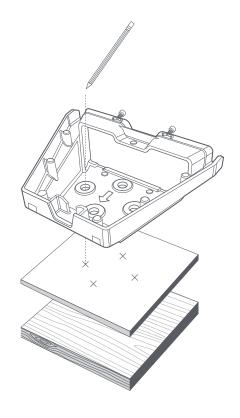

5 | Drill the Pilot Holes

Drill the holes with a 5 mm (3/16 in) drill bit.

A mounting surface of at least 1.5mm thick is recommended.

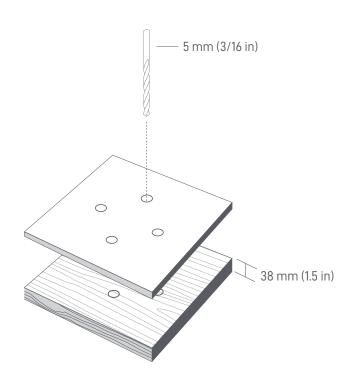


SCREW INSTALLATION

6 | Screw Mount to Surface


Install a washer on the end of each screw and secure the mount to surface.

Using a 13mm (1/2 in) deep-welled socket is recommended.

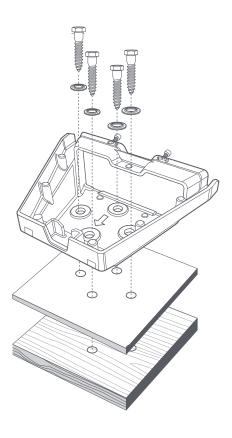

7 | Route Cable Through Mobility Mount


Route the Starlink cable through the opening in the mobility mount and out the front end.

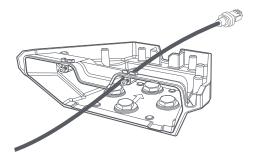


8 | Plug in Cable and Install Starlink

Plug the ethernet cable into your Starlink and ensure the ethernet cable is fully inserted.

Slide your Starlink into the mount until it clicks into place.

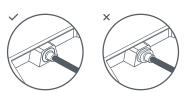

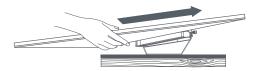




SCREW INSTALLATION


9 | Secure Mount

Using the screwdriver, drive in the two locking screws until hand tight.

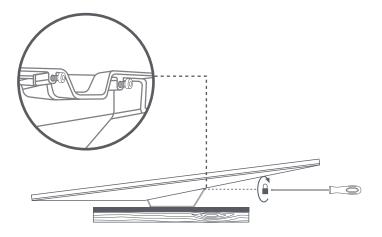

Removing Your Starlink

If you need to remove your Starlink, back out the locking screws. Then push down on the release tab on the mount while pushing your Starlink away from you.

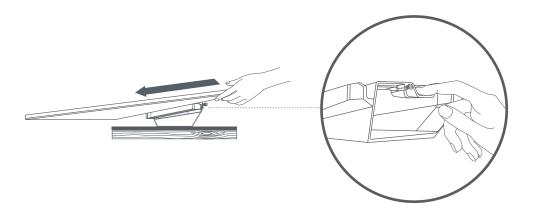

BOLT INSTALLATION

1 | Download the Starlink App

Scan the QR code to download the Starlink App.








2 | Find Mounting Location


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overheard. Objects that obstruct the connection between your Starlink and the satellite will cause service interruptions. Use the obstructions tool in your App to ensure you have selected a suitable mounting location.

You will also want to ensure your Starlink is mounted in the correct orientation relative to your vehicle as shown below.

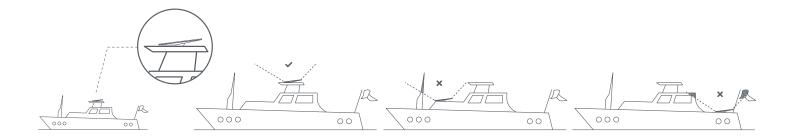

3 Remove Kickstand


Squeeze the release tab and pull it away from its fixed location.

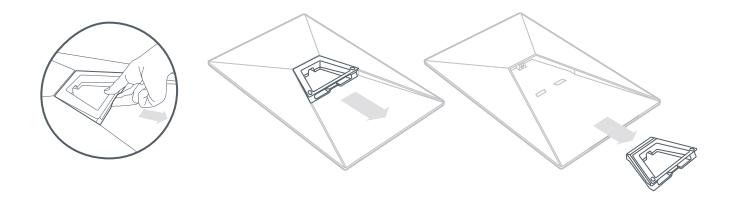

BOLT INSTALLATION


4 | Mark the Pilot Holes

Identify the installation location on your vehicle and mark the location of the 4 holes on your mobility mount using a pen or pencil.

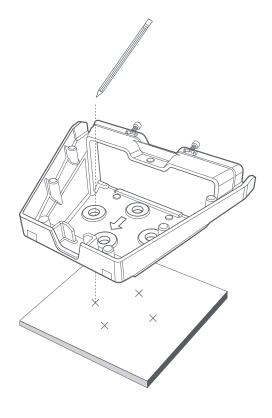

5 | Drill the Pilot Holes

Drill the holes with a 9 mm (3/8 in) drill bit.

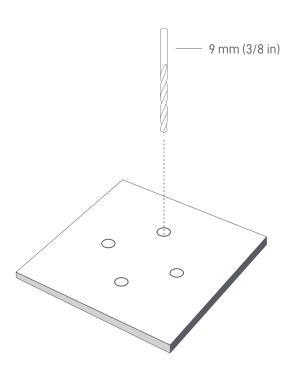


BOLT INSTALLATION

6 | Secure Mount to Surface


Install a washer on the end of each bolt and insert bolts through the mount and pre-drilled holes. Install a nut on the end of each bolt and secure the mount to surface.

Using a 14 mm deep-welled socket is recommended.

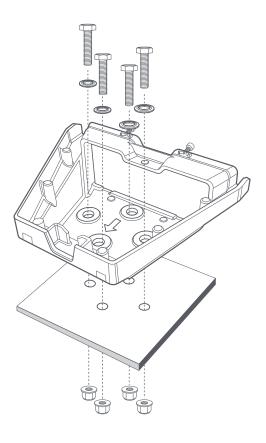

7 | Route Cable Through Mobility Mount


Route the Starlink cable through the opening in the mobility mount and out the front end.

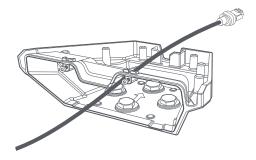

8 | Plug in Cable and Install Starlink

Plug the ethernet cable into your Starlink and ensure the ethernet cable is fully inserted.

Slide your Starlink into the mount until it clicks into place.

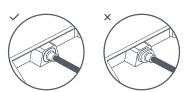






BOLT INSTALLATION

9 | Secure Mount

Using the screwdriver, drive in the two locking screws until hand tight.

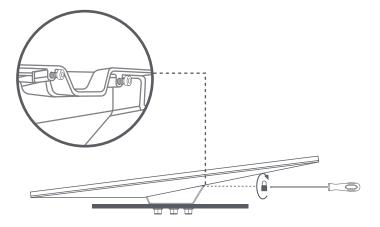

Removing Your Starlink

If you need to remove your Starlink, back out the locking screws. Then push down on the release tab on the mount while pushing your Starlink away from you.

